

# Zilan®

Chocolate Fountain  
ZLN2144



INSTRUCTION MANUAL

**30 Watt**

**220-240V**

**50/60 Hz**

[www.zilan.com.tr](http://www.zilan.com.tr)


**GENERAL SAFETY INSTRUCTIONS & WARNINGS**

- Before using the appliance, read these operating instructions carefully and follow all instructions contained herein. The manufacturer shall not be held liable for damage resulting from improper use or use contrary to its intended purpose.
- This appliance is intended for household use only. Do not use it for any purpose other than its intended use.
- The appliance must only be connected to a properly earthed 230V ~ 50Hz power socket. To enhance safety, avoid connecting multiple high-power appliances to the same electrical circuit simultaneously.
- Exercise special caution when the appliance is used in the presence of children. Do not allow children to play with the appliance, and do not allow children or persons unfamiliar with the appliance to use it.
- **WARNING:** This appliance may be used by children aged 8 years and above, and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they are supervised or have been given instruction concerning safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children unless they are over 8 years old and supervised.
- Always unplug the appliance from the power outlet after use by holding the plug. Do not pull the power cord.
- Do not immerse the power cord, plug, or the appliance itself in water or any other liquid. Do not expose the appliance to weather conditions such as rain or direct sunlight, and do not use it in high-humidity environments (e.g. bathrooms).
- Regularly inspect the power cord for damage. If the power cord is damaged, it must be replaced by an authorized service center or qualified technician to avoid danger.
- Do not use the appliance if the power cord is damaged, if the appliance has been dropped, or if it is malfunctioning. Do not attempt to repair the appliance yourself, as this may result in electric shock. Any repairs must be carried out by authorized service personnel only.
- Place the appliance on a stable, level, and heat-resistant surface, away from heat sources such as electric cookers, gas burners, or ovens.
- Do not use the appliance near flammable materials.
- Ensure that the power cord does not hang over the edge of a table or come into contact with hot surfaces.
- Do not leave the appliance switched on or plugged into the power outlet unattended.

## EN

- For additional protection, it is recommended to install a Residual Current Device (RCD) with a rated residual operating current not exceeding 30 mA. Please consult a qualified electrician.
- Never immerse the appliance in water.
- Some surfaces may become hot during operation. Exercise caution when using the appliance.
- The appliance is intended for indoor use only.
- Do not move the appliance while it is in operation.
- Only liquid chocolate suitable for chocolate fountains may be poured into the appliance. Do not use any other liquids or substances.

## GET TO KNOW YOUR CHOCOLATE FOUNTAIN

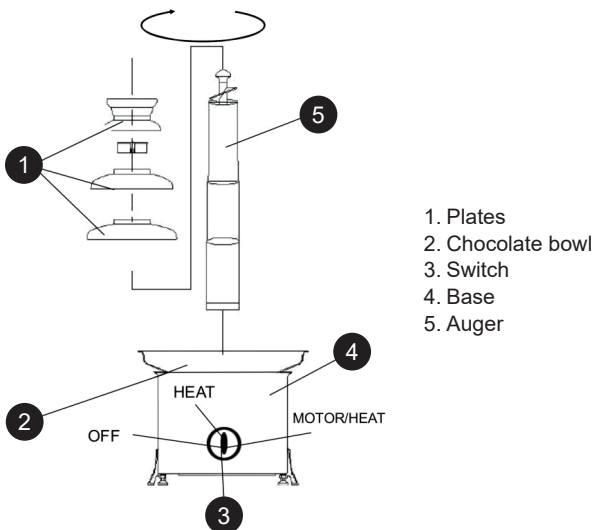

## INSTRUCTIONS FOR USE

- It is recommended to use chocolate specifically intended for chocolate fountains.
- Place the chocolate into the container (2), filling it up to approximately 0.5 cm below the rim.
- Turn on the heating function by setting the switch (3) to the HEAT position.
- Once the chocolate has completely melted, set the switch (3) to the MOTOR/HEAT position.
- The chocolate must have the correct consistency to ensure proper flow.
- To maintain optimal taste and consistency, switch off the appliance every 60 minutes and thoroughly stir the chocolate in the bottom bowl.
- For best flowability, use chocolate with a high proportion of cocoa butter.
- Chocolate specifically designed for chocolate fountains contains a high amount of cocoa butter, providing excellent flowability and usually does not require the addition of oil.
- Chocolate coating contains a medium amount of cocoa butter; therefore, it has moderate flowability and usually requires the addition of a small amount of oil.
- Standard chocolate contains a low amount of cocoa butter, resulting in poor flowability, and almost always requires the addition of oil.
- For best results, pre-melt the chocolate using a hot water bath or heat it in a microwave oven for approximately 1 minute before placing it into the appliance.

## CLEANING AND MAINTENANCE

- It is recommended to clean the appliance after each use.
- Before cleaning, always disconnect the appliance from the power supply.
- Allow the appliance to cool down completely before starting the cleaning process.
- Wash the plates, auger, and bowl with warm water.
- Remove any remaining chocolate residues using a soft cloth or sponge.
- Do not use abrasive cleaners or sharp objects, as they may damage the surfaces.
- Make sure all parts are completely dry before reassembling and storing the appliance.

### Correct Disposal of this product




- This marking indicates that this product should not be disposed with other household wastes throughout the EU.
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
- To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## ÁLTALÁNOS BIZTONSÁGI UTASÍTÁSOK ÉS FIGYELMEZTETÉSEK

- A készülék használata előtt figyelmesen olvassa el ezt a használati útmutatót, és tartsa be az abban foglalt utasításokat. A gyártó nem vállal felelősséget a nem rendeltetésszerű vagy helytelen használatból eredő károkért.
- A készülék kizárólag háztartási használatra készült. Ne használja más célra, mint amire rendelték.
- A készüléket kizárólag megfelelően földelt, 230V ~ 50Hz hálózati aljzathoz csatlakoztassa. A biztonság növelése érdekében kerülje több nagy teljesítményű készülék egyidejű csatlakoztatását ugyanarra az áramkörre.
- Különös óvatossággal járjon el, ha a készüléket gyermekek közelében használja. Ne engedje, hogy gyermekek játsszanak a készülékkel, és ne engedje, hogy gyermekek vagy a készüléket nem ismerő személyek használják azt.
- FIGYELMEZTETÉS: A készüléket 8 évesnél idősebb gyermekek, valamint csökkent fizikai, érzékszervi vagy mentális képességekkel rendelkező személyek, illetve tapasztalat vagy ismeret hiányában is használhatják, amennyiben felügyelet alatt állnak, vagy megfelelő útmutatást kaptak a készülék biztonságos használatáról, és megértették a használattal járó veszélyeket. Gyermekek nem játszhatnak a készülékkel. A tisztítást és a felhasználói karbantartást gyermekek nem végezhetik, kivéve ha elmúltak 8 évesek és felügyelet alatt állnak.
- Használat után mindig húzza ki a készüléket a hálózati aljzathoz a dugót megfogva. Ne húzza a tápkábelt.
- Ne merítse a tápkábelt, a csatlakozódugót vagy magát a készüléket vízbe vagy más folyadékba. Ne tegye ki az eszközt időjárási hatásoknak (eső, közvetlen napsugárzás), és ne használja magas páratartalmú környezetben (pl. fürdőszobában).
- Rendszeresen ellenőrizze a tápkábel állapotát. Amennyiben a tápkábel megsérült, azt kizárólag hivatalos szerviz vagy szakképzett technikus cserélheti ki a veszélyek elkerülése érdekében.
- Ne használja a készüléket sérült tápkábellel, ha leesett, megsérült vagy nem működik megfelelően. Ne kísérelje meg saját maga megjavítani a készüléket, mert ez áramütéshez vezethet. Javítást kizárólag arra jogosult szerviz végezhet.
- A készüléket stabil, vízszintes és hőálló felületre helyezze, távol hőforrásoktól, például elektromos tűzhelytől, gázégőtől vagy sütőtől.
- Ne használja a készüléket gyúlékony anyagok közelében.

- Ügyeljen arra, hogy a tápkábel ne lógjon le az asztal széléről, és ne érintkezzen forró felületekkel.
- Ne hagyja a készüléket felügyelet nélkül bekapcsolva vagy a hálózatra csatlakoztatva.
- A fokozott biztonság érdekében javasolt egy legfeljebb 30 mA névleges hibaáramú áram-védőkapcsoló (RCD) felszerelése. Forduljon szakképzett villanyszerelőhöz.
- Tilos a készüléket vízbe meríteni.
- A készülék egyes felületei működés közben felforrósodhatnak. Használat során járjon el körültekintően.
- A készülék kizárólag beltéri használatra alkalmas.
- A készüléket működés közben tilos elmozdítani.
- A készülékbe kizárólag csokoládé szökőkutakhoz alkalmas folyékony csokoládé tölthető. Más folyadékok vagy anyagok használata tilos.

## ISMERJE MEG CSOKOLÁDÉSZÖKŐKÚTJÁT

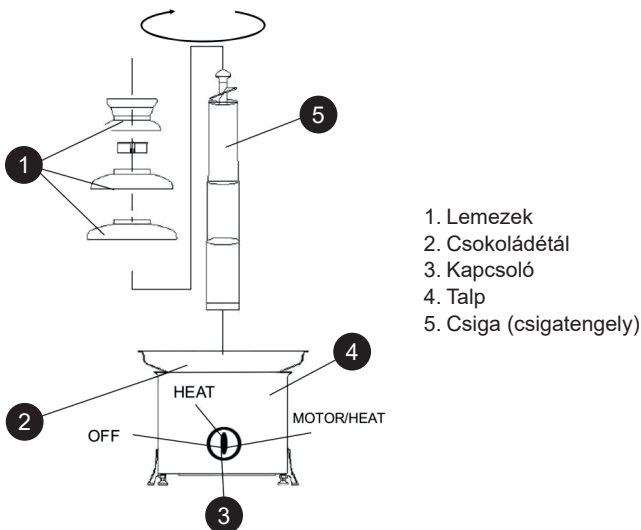

## HASZNÁLATI UTASÍTÁS

- Ajánlott kifejezetten csokoládé szökökutakhoz készült csokoládét használni.
- Helyezze a csokoládét a tartályba (2), körülbelül 0,5 cm-rel a perem alatt hagyva helyet.
- Kapcsolja be a fűtési funkciót a kapcsoló (3) HEAT állásba állításával.
- Miután a csokoládé teljesen megolvadt, állítsa a kapcsolót (3) MOTOR/HEAT állásba.
- A megfelelő áramláshoz a csokoládénak megfelelő állagúnak kell lennie.
- Az optimális íz és állag megőrzése érdekében 60 percenként kapcsolja ki a készüléket, és alaposan keverje meg a csokoládét az alsó táliban.
- A legjobb folyékonyság érdekében magas kakaóvaj-tartalmú csokoládét használjon.
- A csokoládé szökökutakhoz készült csokoládé magas kakaóvaj-tartalommal rendelkezik, ezért kiváló folyékonyságú, és általában nem igényel olaj hozzáadását.
- A bevonócsokoládé közepes mennyiségű kakaóvaj-tartalmaz, ezért közepes folyékonyságú, és általában kis mennyiségű olaj hozzáadását igényli.
- A hagyományos csokoládé alacsony kakaóvaj-tartalmú, ezért nem eléggé folyékony, és szinte mindig szükség van olaj hozzáadására.
- A legjobb eredmény érdekében a csokoládét előzetesen olvassza meg vízgőz felett, vagy melegítse mikrohullámú sütőben körülbelül 1 percig, mielőtt a készülékbe helyezné.

## TISZTÍTÁS ÉS KARBANTARTÁS

- A készüléket minden használat után ajánlott megtisztítani.
- Tisztítás előtt mindig húzza ki a készüléket a hálózati aljzatból.
- A tisztítás megkezdése előtt hagyja, hogy a készülék teljesen lehűljön.
- Mossa el a tányérokat, a csigatengelyt és a tálat meleg vízben.
- A megmaradt csokoládémaradványokat puha kendővel vagy szivaccsal távolítsa el.
- Ne használjon súrolószereket vagy éles tárgyakat, mert ezek károsíthatják a felületeket.
- Az összeszerelés és tárolás előtt győződjön meg arról, hogy minden alkatrész teljesen száraz.

### Ezen termék helyes ártalmatlanítása



- Ez a jelölés azt jelzi, hogy ezt a terméket nem szabad más háztartási hulladékkal együtt eldobni az EU-ban.
- Annak érdekében, hogy megelőzzük a környezet vagy az emberi egészség lehetséges károsodását az irányítatlan hulladékkezeléstől, felelősen újra kell hasznosítani, hogy a anyagi erőforrások fenntartható újrafelhasználását elősegítsük.
- A használt eszköz visszajuttatásához használja a visszatérési és gyűjtési rendszereket, vagy lépjen kapcsolatba az eszköz vásárló helyével. Ők elvehetik ezt a terméket környezetbarát újrahasznosítás céljából.



[www.zilan.com.tr](http://www.zilan.com.tr)



@zilanhome